




STC100/ STC101/ STC600
STC200/ STC201/ STC600D

Pipe contact temperature sensor
Anlignings temperaturgivare
Anlegetemperatursensor
Sonde d'applique
Sensor de temperatura aplicada
Sensore temperatura a contatto


0FL-4345-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

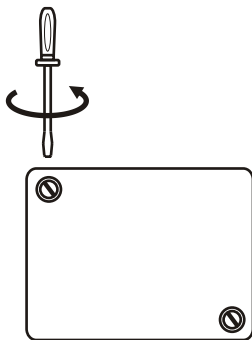


2.

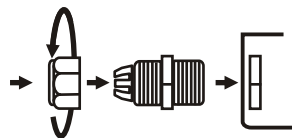

3.

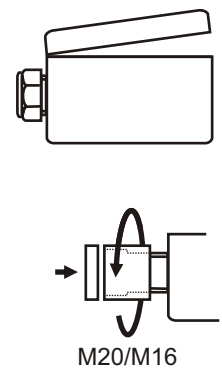

4.

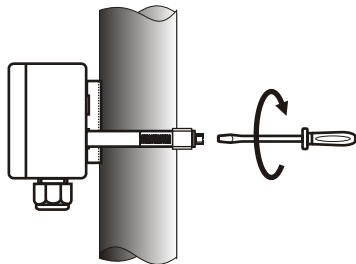

5.

